

TRADITIONAL/MICHIGAN CHAIR ASSEMBLY INSTRUCTIONS

Here are the five pieces you will assemble:

1. Preassembled chair base
2. Preassembled chair back
3. Right arm/leg
4. Left arm/leg
5. Front support



Required tools (not included):

Philips screwdriver
1/2" socket or wrench

Hardware (included):

(12) Washers
(12) Lag Screws
(22) 1 1/4" Screws



We recommend you use a screwdriver and socket to hand tighten so you do not drill through.

If you choose to use a power drill, DO NOT OVER TIGHTEN.




Visit www.truaxtimberco.com/instructions to view these same instructions online

Step 1 - Back and Base

Stand base on its side.

Line up the two (2) dowels on the chair back with the holes on the chair base.


Insert the dowels into the holes lining up the back and base.

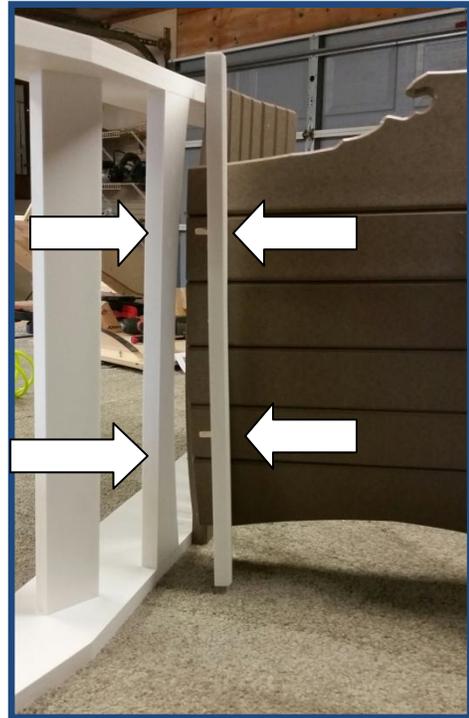

Step 2 - Back and Base

Insert one (1) washer/lag screw into each of the two holes underneath the chair and tighten.

Now the back and base are secured to each other.

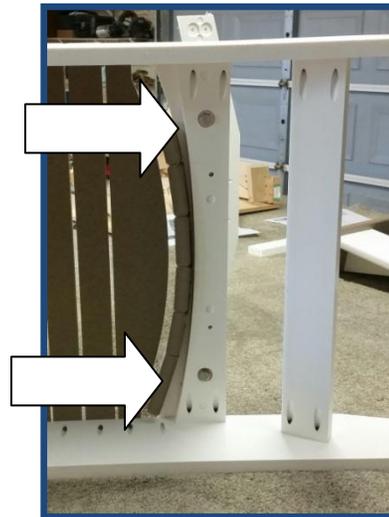


Step 3 - Back and Base

Insert six (6) screws into each of the six (6) pilot holes.




Step 4 - Leg and Arm

With the chair still on its side, line up and insert the dowels on the leg with the center on the chair base.

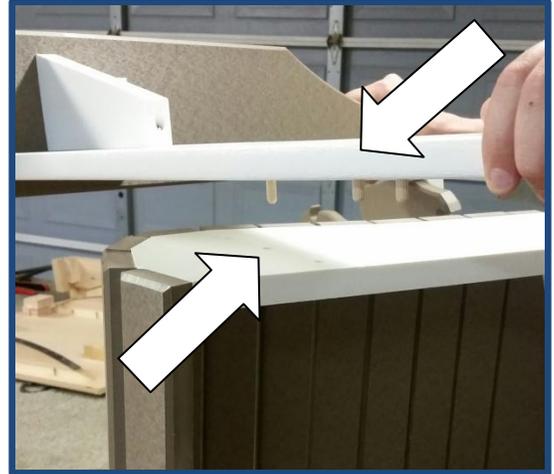

Align the back of the arm with the holes on the back support piece. Keeping your hand on the arm, insert one (1) washer/lag screw and two (2) screws into the pilot holes and tighten.

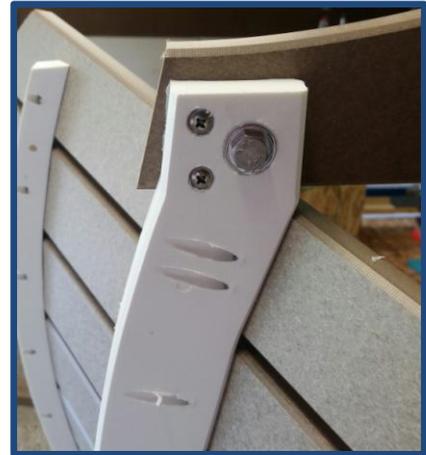

Step 5 - Leg and Arm

Insert four (4) washers/lag screws into the front leg and tighten them. Insert four (4) screws into pilot holes and tighten.




Step 6 - Leg and Arm

Repeat Steps 3, 4, and 5 for the other side of the chair.

Step 7 - Front Support

Turn chair over. Fit the support board in to the slot and insert two (2) screws on each side and tighten.

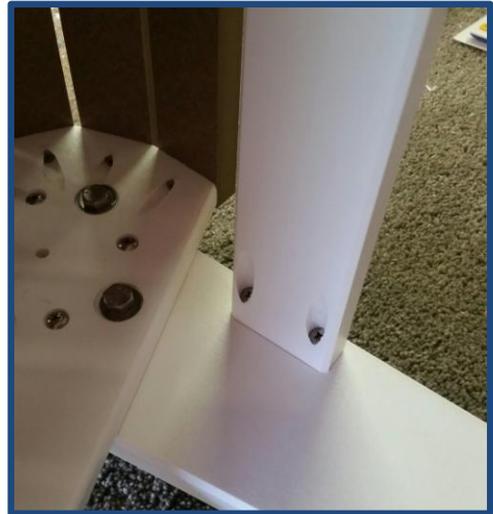

Step 8 - Completion

Make sure all lag screws and screws are tight.

Chair assembly is now complete.

Set the chair upright and relax!

